

ADA TACTILE SIGN · SHARPS DISPOSAL

SHARPS DISPOSAL TACTILE PLACARD

A custom ADA red tactile placard, pre-drilled to line up with the Loo's rear shear panel and the Vandal Guard sharps enclosure.

**6" x 9"**

1/2" RADIUS CORNERS

1/16" Rowmark

321-601 ADA RED

Pre-drilled

4 CORNER HOLES + 1" CENTER OPENING

Tactile + braille

RAISED SYMBOLS, RAISED TEXT, GRADE 2

OVERVIEW

The Sharps Disposal placard marks the Portland Loo's sharps drop. A biohazard symbol and a downward arrow point to a 1" opening in the middle of the placard, with "SHARPS DISPOSAL" in raised letters and Grade 2 braille below, all on 1/16" Rowmark ADA red.

Each placard is custom made by Madden Fabrication with its mounting holes pre-drilled to align with the rear shear panel and the Vandal Guard polycarbonate sharps containment box behind it, so it bolts straight on and the opening lines up every time.

KEY FEATURES

01 Clear warning

A raised biohazard symbol and arrow lead users straight to the sharps opening.

03 Drilled to fit

Holes align with the Loo's rear shear panel and the Vandal Guard sharps enclosure. No field drilling.

02 Readable by touch

Raised symbols, raised text and clear Grade 2 braille for users with low or no vision.

04 ADA red

High-contrast white on Rowmark ADA red sets sharps disposal apart from the Loo's blue signs.


CONSTRUCTION & SPECIFICATIONS

Size	6" W x 9" H (152 x 229 mm), 1/2" (13 mm) radius corners
Material	1/16" (1.6 mm) Rowmark 321-601, ADA red
Holes	Four 0.2475" (6.3 mm) mounting holes near the corners; one 1" (25 mm) opening in the middle
Raised symbols	Biohazard symbol in a triangle, down arrow and ring around the opening, UV printed raised
Text	"SHARPS DISPOSAL", UV printed raised (tactile) characters, white
Braille	Clear Grade 2 braille: sh(ar)-p-s(dis)-p-o-s-a-l
Fit	Holes pre-drilled to align with Madden Fabrication's rear shear panel and the Vandal Guard polycarbonate sharps enclosure

ORDERING OPTIONS

OPTION	STANDARD	AVAILABLE ON REQUEST
Placard	Sharps Disposal, ADA red STD	—
Companion parts	—	Vandal Guard Sharps Enclosure; Sharps Container (2 gal)

VIEWS

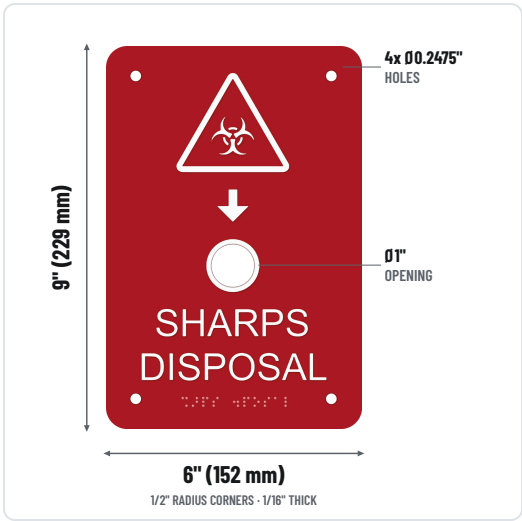

LAYOUT & DIMENSIONS



INSTALLED



BESIDE THE HAND SANITIZER

INSTALL TIP Mount the placard with tamper-resistant fasteners through the four pre-drilled holes into the rear shear panel and sharps enclosure, and check that the 1" opening lines up with the enclosure behind it.